


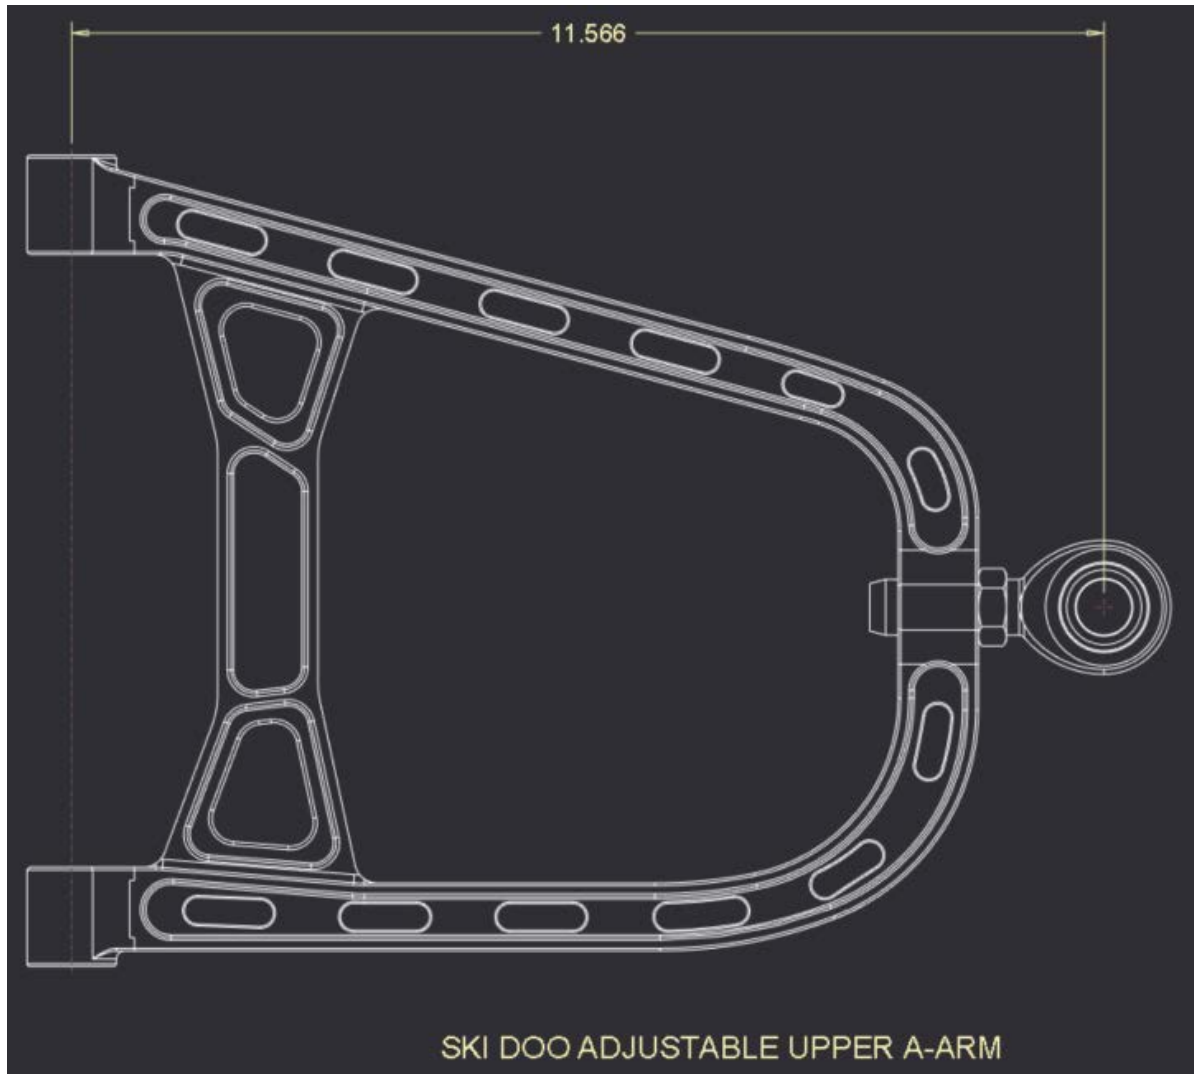

Ski Doo Adjustable Upper A-Arm

- Note: These a-arms have adjustable camber. Changing this setting from stock can cause dangerous handling characteristics. Only change this setting if you are knowledgeable with suspension tuning.
- Install a-arm on to the snowmobile in place of the stock upper a-arm.
- Install tapered (Ski Doo) into the spindle and torque the nut to factory spec. Make sure to reuse any stock washers.
- Torque 12-point bolt, on top of the heim joint. to 30 Ft-Lbs. Use blue Loctie.
- Hand tighten jam nut on the heim joint.

Remember: Performance Matters!



Please email zrp.engineering@gmail.com if there is any issue with your order. We will work tirelessly to make it right!

Like us on fb.me/ZollingerRacingProducts & Order at: ZOLLINGERRACINGPRODUCTS.COM

Remember: Performance Matters!